


Fix bar tablet  
recieve audio  
reception through  
Bluetooth



Tablette mobile  
Mobile tablet  
connect to your sound  
system through wi-fi in  
your garden



CD  
USB  
BLUETOOTH  
AUX

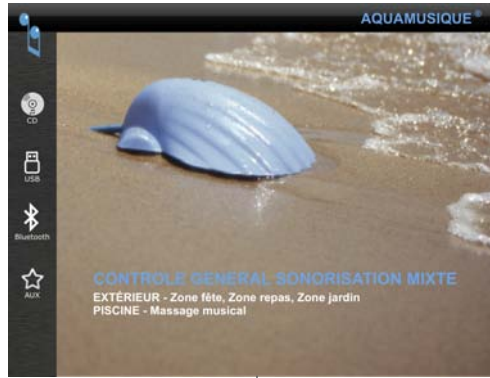

Choose a source with the tablet  
The system will automatically display the control source on the screen

CD

USB

BLUETOOTH

AUX



**CD**

insert CD  
The volume functions will be displayed on the tablet screen  
The tracking function will be displayed on the tablet screen  
The speaker will play the song chosen

**Terminate**  
Press the off icon shown on the side bar of the mobile tablet or fix bar tablet

**USB**

Insert USB flash drive with audio file  
The volume functions will be displayed on the tablet screen  
The tracking function will be displayed on the tablet screen  
The speaker will play the song chosen

**Terminate**  
Press the off icon shown on the side bar of the mobile tablet or fix bar tablet

**Bluetooth**

Choose "BMP40" from the bluetooth menu on your tablet/smartphone  
Open your music app Qobuz, Spotify, Tidal, Apple music, etc... send song to "BMP40"  
Do to privacy and security reasons, only registered tablets/smartphones are able to connect to the system  
You can register, selecting "pairing" and activate Bluetooth on your device

**Terminate**  
Press the off icon shown on the side bar of the mobile tablet or fix bar tablet

**Aux. - Auxiliaire**

auxiliary music source  
Connect a new source (tablet, smartphone, etc...) by inserting the mini-jack on the input of the device

**Terminate**  
Press the off icon shown on the side bar of the mobile tablet or fix bar tablet

